

## EM8300CU CONTINUITY TESTER FOR ESD WRIST-STRAP, MAT AND EARTH



SKU: 131974B



### EM8300CU CONSTANT MONITOR

**EM8300CU Constant Monitor** - Capacitive tester that continuously check if ESD safe wrist-strap and mat are correctly connected to earth. If one of this elements (wrist-strap, mat, grounding) fails, the operator is alerted by an acoustic alarm and a red LED indicator.

The tester works with a standard wrist-strap and cord and has a body mass adjustment for individual user set-up.

#### Specifications

- Model with inverted signs, **to be mounted under the bench**
- Dimensions: 125 x 50 x 20 mm
- **Connections:**  
 ESD mat connection mode (banana/banana cable included): **banana** socket, Ø 4 mm  
 ESD wrist strap connection mode: **banana** socket, Ø 4 mm
- **Functions:**  
 Constant monitoring of the earth to ground connection  
 Constant monitoring of the mat to earth connection



Constant monitoring of the wrist-strap connection.